LAN600M



# LANSDOWN 570X800MM MIRROR

INSTALLATION & AFTERCARE INSTRUCTIONS


## **Before installation**


Wall plugs supplied are only suitable for solid stone/brick walls. For plasterboard walls use specialist wall plugs, if in any doubt please consult an expert.


For wall hanging units: WARNING in order to prevent falling down this product must be used with the wall attachment device provided.

Wear suitable eye protection when drilling. Take care when using power tools near water - the use of residual current device (RDC) is recommended. Beware of hidden pipes or cables. Take care when drilling tiled surfaces as the drill might slip. Use a piece of masking tape to prevent the drill form wandering.

## Installing

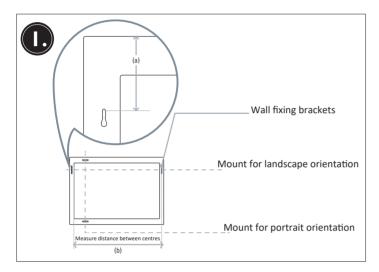



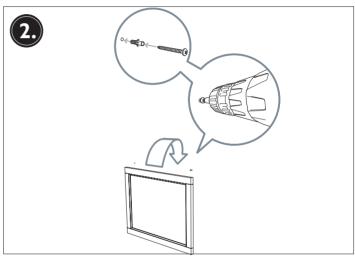

Drill two holes in the marked positions using an 8mm drill bit to a depth of 55mm. Insert the wall plug supplied in the ficing screw, leaving sufficient head showing to slide into the mirror wall brackets.

## **Furniture Care Instructions**

As with all wooden furniture, this product should be treated with care.

#### We recommend...

Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.

All bathrooms should be well ventilated with a suitable extractor fan.

To remove dirt or fingerprints, clean with a soft damp cloth and mild soapy water. Ensure this is dried immediately.

Use a wax free polish if one must be used.

For removal of lime scale deposits use a suitable proprietary cleaner. If necessary test on an inconspicuous area first.

#### Please DO NOT...

Do not scrub or scour.

Do not use abrasive cleaning agents.

### **Aftercare**

Should you require any fitting advice or spare parts for this product please contact Tavistock Bathrooms using the contact details below.