


SOFT CLOSE BAR HINGE TOILET SEAT FITTING INSTRUCTIONS


APPLICABLE TO THE VITORIA, HARROW, GREENWICH AND PAINTED SEAT RANGES

DOES IT FIT?

Please can you measure before opening the pack

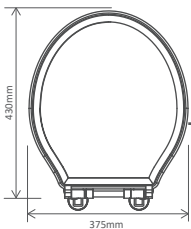

general seat dimensions

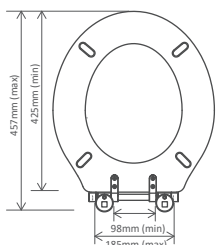

max/min fixing adjustment

AFTERCARE



Clean surfaces with a soft damp cloth and mild soap solution



Do not scrub or scour



Do not use bleach, abrasive or corrosive cleaning agents



Do not stand on the lid or ring of your toilet seat

If using bleach, abrasive or corrosive cleaning agents inside the toilet bowl, ensure that these do not come into contact with the seat. Keep the seat in the upright position until all cleaner has been flushed away.

1

The seat comes with parts for two fixing options: Top Fix and Bottom Fix.

Tools needed: Cross head screwdriver.

2

In order to use the top fix insert, the lower section must protrude from the underside of the toilet pan deck. Insert fully into the fixing hole in the pan to check. If the pan is too thick then use the bottom fix components.

3

Once you have determined the fixing method, loosen the base plate bolts to allow for adjustment. The holes in the base plates have a stepped profile to allow you to attach it to the hinge in a number of positions. Do not tighten the bolts fully at this point.

4

Offer the seat up to the toilet pan, check whether the fixing holes on the top of the pan line up with the square holes in the base plates and the seat lines up with the overall profile of the pan. If they do not line up, adjust the baseplate's position using the stepped hole until the seat fits the pan correctly. Tighten the base plate fixing bolts fully.

Note: it is important that you use the serrated washers between the base plate and base plate bolts.

5

Top Fix Method
Insert the top fix inserts into the pan fixing holes and press in firmly. Make sure the O-rings are in the bottom of each baseplate. Insert the rectangular washers and fixing bolts through each base plate and screw into the inserts. As you tighten the bolt, the insert will expand and pull tight against the underside of the pan. Do not overtighten at this point.

6

Bottom Fix Method
Make sure the O-rings are in the bottom of each base plate then insert the rectangular washers and fixing bolts through each base plate. Pass the bolts through the pan fixing holes and screw on the conical washers, metal washers and wingnuts as shown. Do not overtighten at this stage.

7

Further adjustments can be made to the seat's position by adjusting the position on the fixing bolts and washers relative to the base plates. (see adjustment B & C). If the seat is still not aligned properly follow the instructions in step 4 again to adjust the base plate (adjustment A).

8

Once positioned, swivel the base plate covers over the base plates and push down to secure. Note you may need to lift the seat to an upright position to move the covers.

CARE + SAFETY

After a few days check that the fixings are still tight. This is necessary as the rubber components will compress during the first few days. Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the toilet seat as careless handling may cause damage or injury. The toilet seat can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrect product installation or assembly.

FOR TECHNICAL HELP CALL:
01225 303900 / 01225 787870

Brought to you by the Roper Rhodes Group, Brassmill Lane Trading Estate, Bath BA1 3JF